

Charlton & Jenrick^{LTD}

Best of British fires, fireplaces & stoves


Go Eco Electric Fire Instruction Manual

Model:

GoEco MW100

GoEco MW150

GoEco MW180

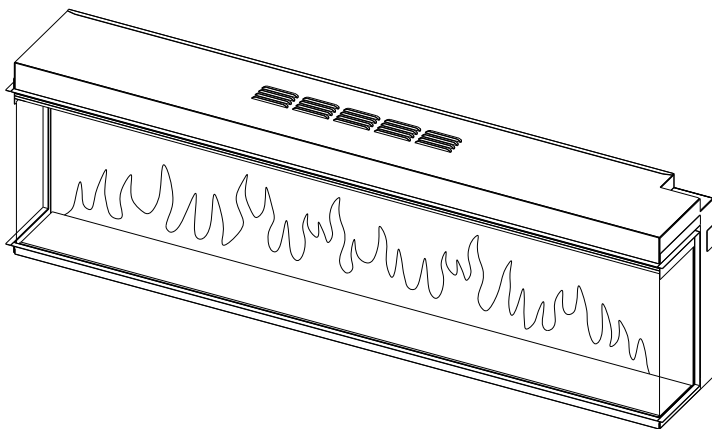

**Please read the instructions carefully before installation
or use and keep for future reference.**

CONTENTS

1. Important Safety Information.....	1
2. Technical Specifications.....	3
3. Parts And Hardware.....	4
4. Appliance Dimensions.....	6
5. Installation Instructions.....	7
6. Operating Instructions.....	16
6A. Manual Control Panel.....	17
6B. Remote Control.....	18
6C. APP Control.....	21
7. Maintenance.....	21
8. Service Parts list.....	22
9. Others.....	24

1. IMPORTANT SAFETY INFORMATION

- **Read all of the instructions carefully before using the appliance.**
- **For indoor use only.** This appliance is not suitable for use outside the house and **only suitable for well insulated spaces or occasional use.**
- Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not use this fire as a free-standing appliance. It must always be fixed to the wall, fireplace mantel, floor etc.
- This fire must not be located immediately below or in front of a socket-outlet.
- This appliance must be earthed.
- This appliance must not be supplied through an external switching device, such as a timer, or connected to the circuit that is regularly switched on and off by utility in order to avoid a hazard due to the inadvertent resetting of the thermal cut out.
- If the power cord is damaged, it must be repaired by the manufacturer, its authorized service center or professional person in order to avoid a hazard.
-  The figure in the marking is **“Do Not Cover”**. **Warning:** in order to avoid overheating, do not allow the appliance to be covered or let the air inlet/outlet become obstructed. Please note the warning on the appliance.
- To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 meter from the air outlet.
- Keep the power cords away from hot surfaces and hot conditions. Do not route the power lead in front of the appliance.
- Do not use this fire in rooms that have explosive gas in them (for example petrol), or if you are using solvents, glue, aerosol spray or in flammable paints, as these may catch fire.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Cleaning and user maintenance shall not be made by children without supervision.
- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the power plug accessible after installation for the purpose of isolation.
- Children of less than 3 years should be kept away unless continuously supervised or a fireguard is fitted.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

WARNING! Information below for authorized person or service centre only:

A non-rewireable plug fitted with a 13A fuse is supplied . Should the fuse or plug need replacing, and you are competent to do so, it must be replaced with a 13A fuse or plug being 13A BS1363A approved.

2. TECHNICAL SPECIFICATIONS

Model No.	Go Eco MW110	Go Eco MW150	Go Eco MW180
Supply Voltage	AC 230-240V 50Hz	AC 230-240V 50Hz	AC 230-240V 50Hz
Max. Power Consumption	1500W	1500W	1500W
Power For Flame Effect	8.5W	10.5W	11.5W
Power For Fuel Bed Effect	6.6W	8.4W	10.5W
Power For Ambient Light Kit	16W	16W	16W

Information requiremetn for electric local space heaters			
Power consumption	In idle mode	P_{idle}	1.1W
	In network standby	P_{nsm}	1.1W
	In off mode	P_o	0
	In standby mode	P_{sm}	N/A
	Standby mode with display of information or status		NO
	Seasonal space heating energy efficiency in active mode	$\eta_{s,on}$	96.00%
Heat output	Nominal heat output	P_{nom}	1378-1500W
	Minimum heat output	P_{min}	689W
	Maximum continuous heat output	$P_{max,c}$	1500W

TYPE OF HEAT OUTPUT / ROOM TEMPERATURE CONTROL

Single stage heat output and no room temperature control	No
Two or more manual stages , no room temperature control	No
With mechanic thermostat room temperature control	No
With electronic room temperature control	Yes
Electronic room temperature control plus day timer	Yes
Electronic room temperature control plus week timer	Yes









OTHER CONTROL OPTIONS






Room temperature control, with presence detection	No
Room temperature control, with open window detection	Yes
With distance control option	Yes
With adaptive start control	Yes
With working time limitation	No
With black bulb sensor	No
Self-learning functionality	No
Control accuracy	No

3. PARTS AND HARDWARE



- Unpack the fire carefully and make sure that the appliance is intact with no signs of damage caused by transport and no part has been exposed to water. If in doubt, do not use the appliance and contact your retailer.
- Keep plastic wrapping away from children.
- Save the original packaging as this may be required in the event of service complaint with product.
- Ensure that all parts are removed from the packaging.

    Important Note: - all screws used on this appliance are Phillips Head, Using a Pozzi screwdriver will damage screw heads

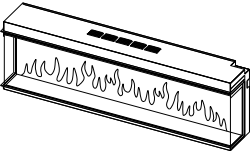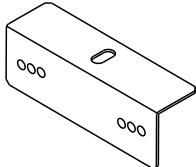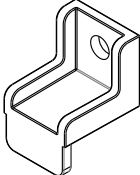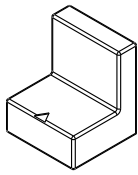A.  Firebox (1pc)	B.  ST4*8 Screw (5pcs)	C.  ST4*40 Screw MW100 (4pcs) MW150/MW180(6pcs)
D.  ST5*40 Screw MW100 (14pcs) MW150(18pcs) MW180(22pcs)	E.  Wall Plug MW100 (14pcs) MW150(18pcs) MW180(22pcs)	F.  Power Cord Bracket (1pc) (Installer must fit before leaving appliance)
G.  Lower Brackets (2pcs) (To be used when the wall haning bracket(J) is used)	H.  Glass Fixing Bracket (2pcs)	I.  Black Cover(2pcs)

     J.  Wall hanging bracket is attached on firebox (1pc) Remove from the appliance if you are not fixing to wall	K.  Power Cord UK (1pc)	L.  Power Cord EU (1pc)
M.  Edging Strips (2pcs)	N.  Edging Strips (2pcs)	O.  Edging Strips (2pcs)
P.  Sucker(1pc)	Q.  Logs (1set)	R.  Black Resin Chips (1set)
S.  Vermiculate (1set)	T.  Remote (1pc)	U.  AAA Battery (2pcs)
V.  Instruction Manual (1pc)	W.  Simplified Instruction (1pc)	

 4. APPLIANCE DIMENSIONS

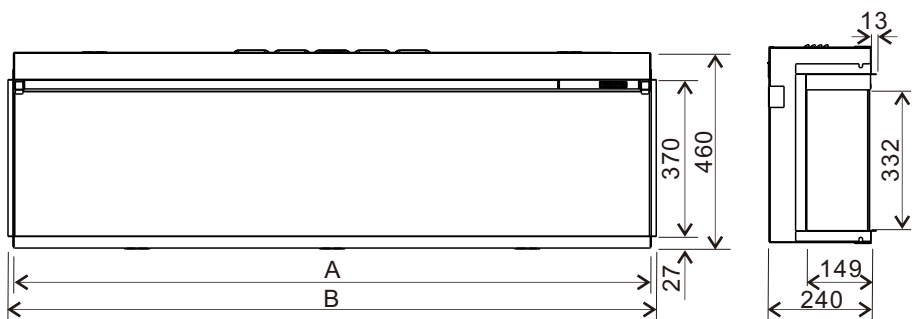

Unit:mm

Model No.	Go Eco Mw100	Go Eco MW150	Go Eco MW180
A	1000	1500	1800
B	1028	1528	1828

5. INSTALLATION INSTRUCTIONS

5.1 PREPARATION BEFORE INSTALLATION

TOOLS REQUIRED

A screwdriver, a spirit level and drill will be needed.


LOCATE THE APPLIANCE

Your new electric fireplace may be installed virtually anywhere in your home. However, when choosing a location, ensure that the general instructions are followed:

- For best result, install out of direct sunlight, water or very damp air.
- The appliance should be connected to an earthed electrical outlet and it **must be** easily accessible to allow disconnection.
- If the appliance is fitted into or against a flue/chimney, the flue/chimney must be blocked at its entrance (i.e. with Rockwool or similar) to avoid the air flow creating a failure of the fan heater.


MINIMUM CLEARANCE TO COMBUSTIBLE

Sides	0
Floor	0
Back	0
Front	1000mm Minimum
Top (Mantel or TV)	200mm Minimum

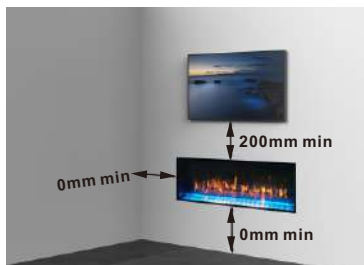


REMOVE WALL MOUNTING BRACKET

- Remove the wall mounting bracket from the rear of the appliance by removing the securing screws from each side.

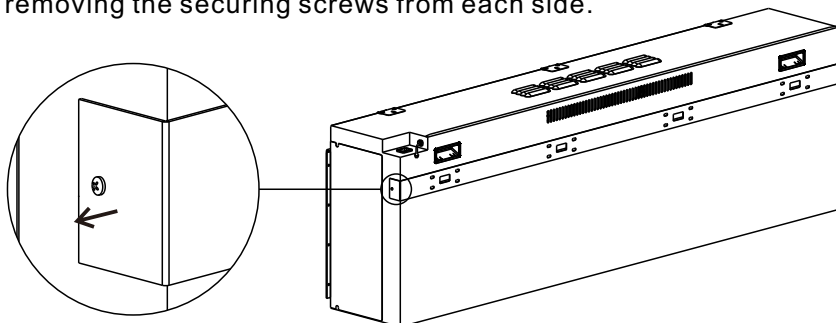


CONNECT POWER CORD

It is very important that the plug is tightly located into the socket in rear of appliance . **It is essential that the retention clip provided is fixed in place** using the ST4*8 screw,ensuring a secure connection to the appliance. It is recommended that you turn on and operate the appliance to check that all functions and that there are no issues with the appliance before installation.

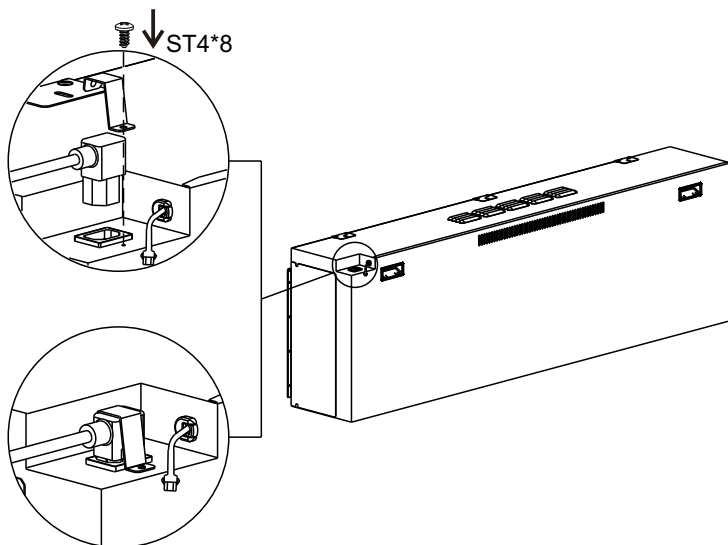

CONNECT MOOD LIGHTS CABLE

The interface of the mood lights cable is on the rear of the appliance, near the position of the power cord. Please also check the function after connecting the mood light.

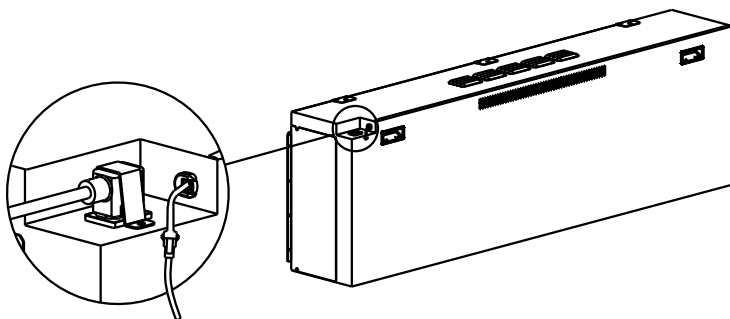

Note: Compatible mood lighting devices are available from Charlton & Jenrick Ltd., Other brands may not be suitable and void the warranty.

CHOOSE ASPECT TYPE


The appliance can be installed in 3 different arrangements. They are as follows:

- **Front view (only the front window is visible)**

When you unpack the appliance, you will notice that the side panels have been fixed on the appliance, which makes the appliance visible on only one front side.

- **Corner Aspect (the front and one of the side windows are visible)**

Remove the side panel from the end you want to feature the glass panel. Then take the **top / bottom** edging strips and the **side** edging strip and fix them to the appliance using the screws taken from the removal of the side panel(s)

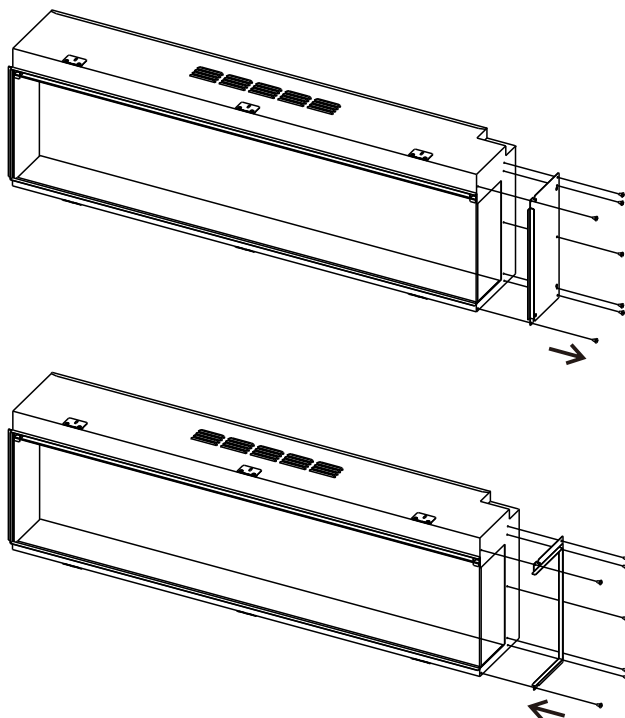


- **Panoramic Aspect (the front and both sides windows are visible)**


Repeat the corner aspect procedure on the opposite side of the appliance.

REMOVE FRONT GLASS PANEL

- Remove the 2 screws securing each transit retaining clip from both sides. Retain the screws for later use. **Note:** Clear plastic fixing brackets and black covers are provided for the refixing of the glass panel (see additional parts list on page 4 items H and I)

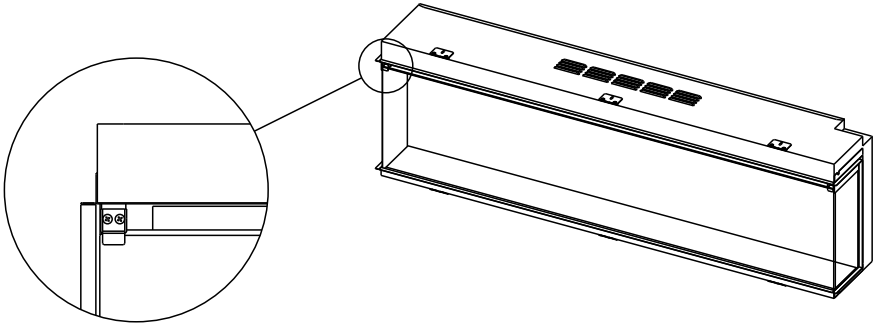

- Use a suction cup provided to support the middle of the glass panel and lift the panel upwards and pull it forwards at its top edge. Carefully lift glass away as shown below.

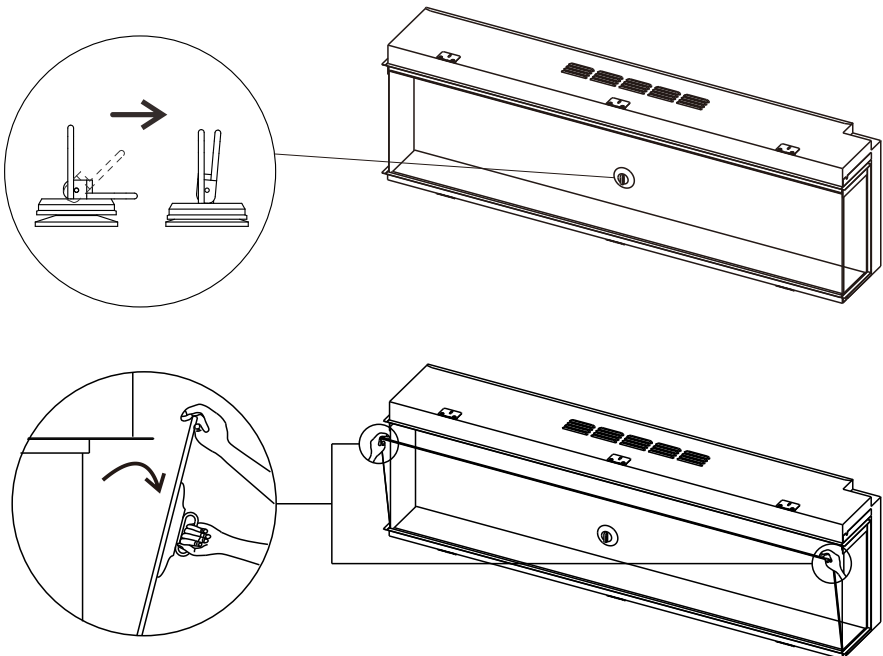


5.2 CHOICE OF INSTALLATION METHOD

The following is only given as a general guide because it can be installed in so many ways. Provided you ensure electric connections are safely made in accordance with the codes, various materials can be used for the framework and cladding. But consideration should be made to soften the internal surface of any cladding to minimise that amplification of noise.


BUILT IN

- Prepare the framework as a general guide only see picture below:


FRONT VIEW

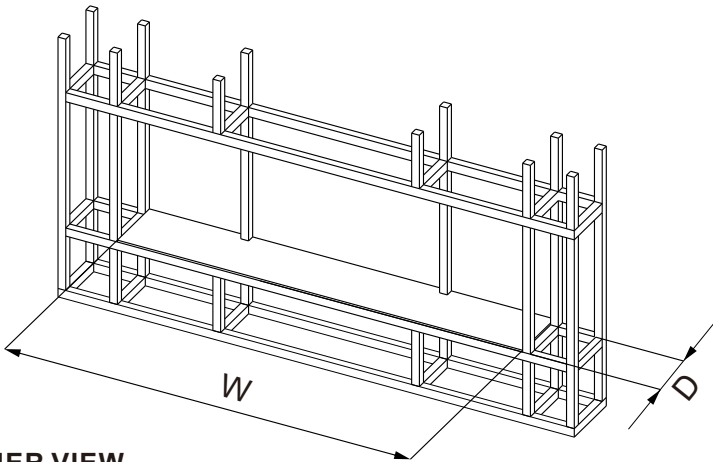

CORNER VIEW

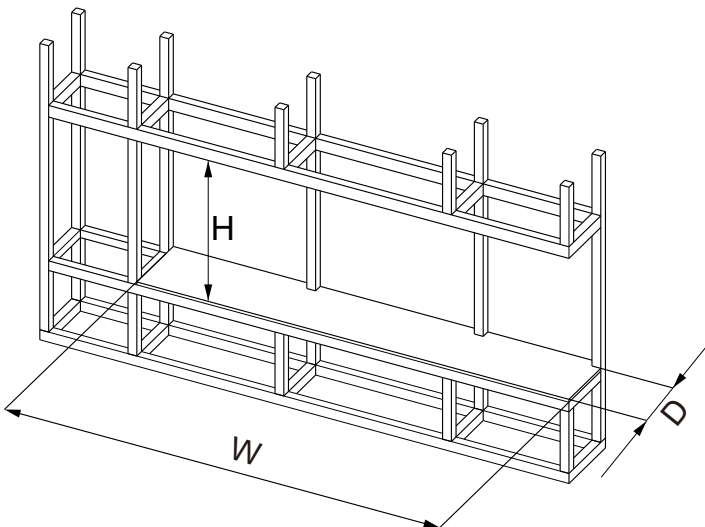

PANORAMIC VIEW

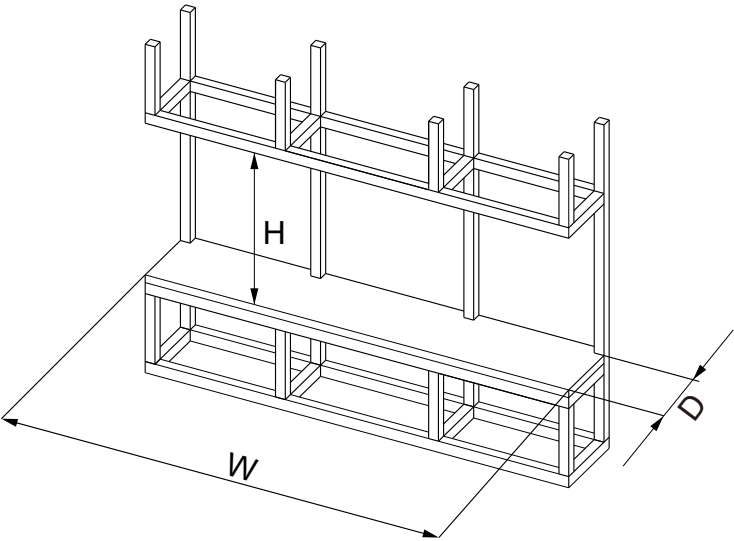


Unit: mm


Recommended Cavity Dimensions (mm)					
Model	H	W			D
		Front	Corner	Panoramic	
Go Eco MW100	476	1030	1020	1010	Min 273
Go Eco MW150	476	1530	1520	1510	Min 273
Go Eco MW180	476	1830	1820	1810	Min 273
These dimensions are a guide. Always measure the appliance on site before cutting the cavity.					

NOTE: Ensure a firm flat surface for positioning of the appliance and securely fix to avoid vibration and movement of the appliance. Ensure a minimum of 20mm clearance at the rear and the top of the appliance for air movement.

- Bend out the four brackets on the upper and lower edges of the appliance, push the appliance into the framework and fix the appliance with four ST4x40 screws provided to the framework. It is important that the appliance is fitted securely as described on the next page.

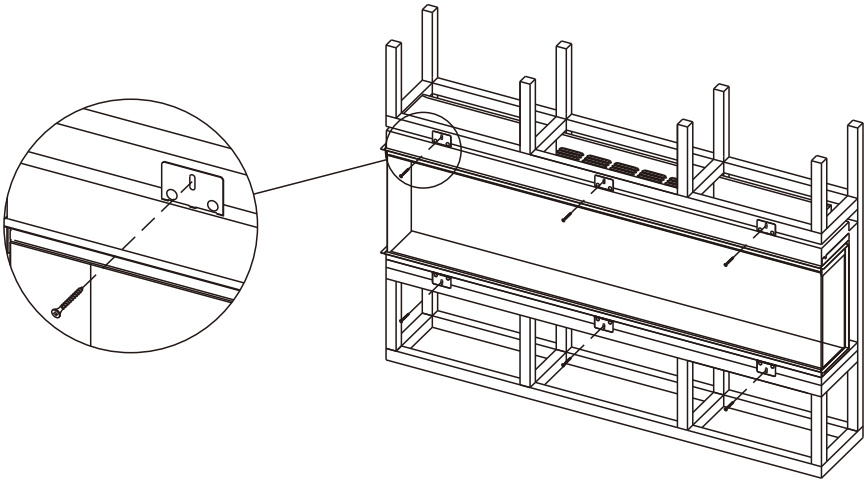


- Cladding the framework. Note: Hard surfaces can amplify sound. Consider adding some underlay or similar to the inside surface of the cladding .

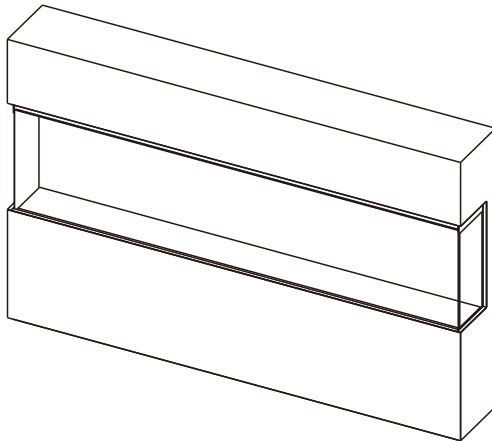


Laying The Fuel Bed (It is best to do this with the fuel bed illuminated)

- Cover the fuel bed area with the 'Black Resin Chips'.
- Lay the decorative 'logs' in an arrangement to your liking.
- Sprinkle the 'vermiculite' over the arrangement.
- Reinstall the front glass panel. Secure the glass fixing bracket(H) with two ST4*8 screws and cover it with the black covers (I) for clean appearance. **Note: Use the screws previously removed.**

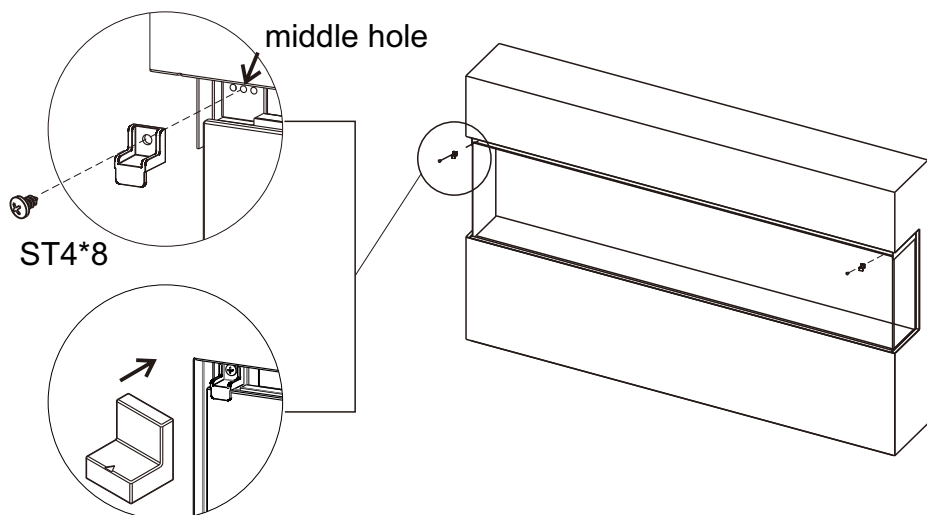


WALL MOUNTED


- Remove the wall mounting bracket from the rear of the appliance, retaining the screws for later use.
- Position mounted bracket horizontally against the wall where you would like to install the appliance. Mark the holes for screws, drill holes on the marks, insert wall plugs(for masonry wall only) and fix the bracket to the wall by ST5x40 screws. It's important that a secure fixing is made to the wall so alternative fixings may be necessary for other wall types.

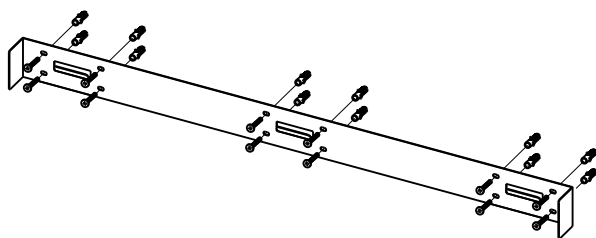

- Attach the bottom mounting brackets to the appliance using four ST4x8 screws provided.

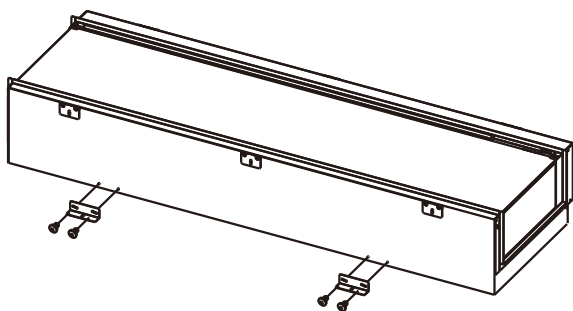

- Lift the appliance up and attach to the wall mounting bracket by locating the fingers on the wall bracket into the rectangular openings in the rear of the appliance.
- Mark the hole position of the bottom mounting brackets, remove the appliance from the wall, drill holes on marked and insert wall plugs.
- Attach the appliance again on the bracket, secure each side with screws previously removed.
- Fix the lower rear of the appliance to the wall with the ST5*40 screws. Ensure the face of the appliance is vertical adjust or pack out lower bracket as required.
- Repeat the steps mentioned previously to arrange the fuel bed and reinstall the front glass.

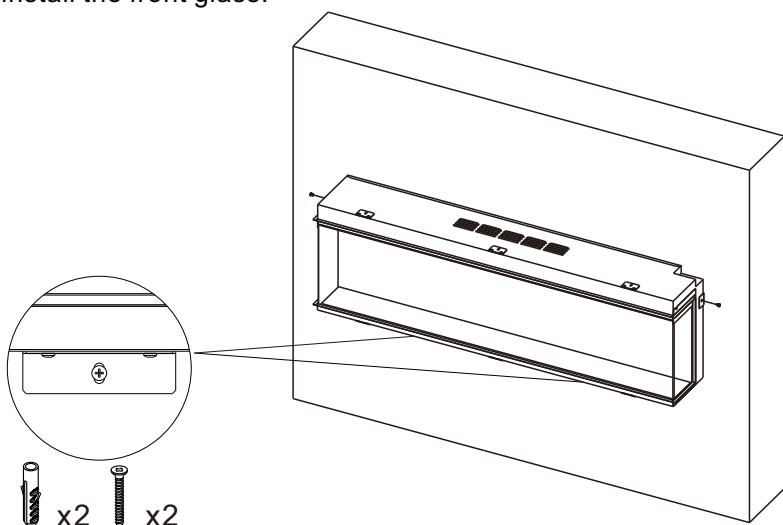

Note: When the appliance is fitted using the wall bracket it is important that a larger clearance of 40mm plus is provided above the appliance to allow for air circulation.

6. OPERATING INSTRUCTIONS

WARNING!

Do not operate the appliance if it is damaged or malfunctions. If you suspect the appliance is damaged or malfunctions, call a qualified service engineer to inspect the appliance, and replace any part of the electrical system if necessary, before reusing.

WARNING!


To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 meter from the air outlet.

MAKE SURE the plug fits tight in the outlet. Faulty wall outlet connections or loose plugs can cause the outlet to overheat.

Do not disconnect the power at the mains supply whilst the appliance is running. Use the functions on the remote to turn the fire off and ensure the mains switch is in the off position before disconnecting.

The appliance can be operated conveniently in 3 different ways: manually using switches on appliance , via the remote-control handset or via the dedicated iOS/Android App.

6A. MANUAL CONTROL

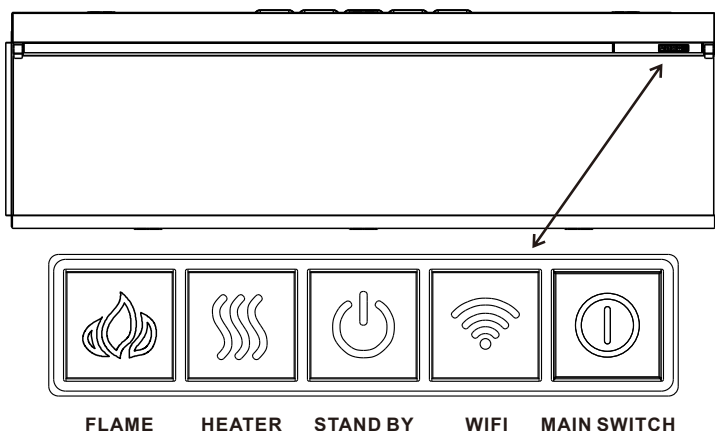

Each time a button is pressed on the appliance or on the remote control, an audible beep is emitted. To turn off this feature, keep pressing button **FLAME** for 3 seconds until you hear two beeps.

Note:

The manual buttons control only basic functions, not a full range of controls. Use in conjunction with the remote handset or the APP to carry out all functions.

MAIN SWITCH

Press to turn on power to the appliance. Button pushed in indicates power is on, button pushed out indicates power is off.

STAND-BY

Turns on the appliance with the last used settings without any heat. Places the appliance into standby mode with all features turned off.

FLAME

Press repeatedly to cycle through 3 flame effects and off setting.

HEATER

Press repeatedly to cycle through low heat setting, high heat setting and no heat.


Note: When the heater is operated by the appliance button and no flame is activated the red indicators will illuminate continuously on the screen.

To prevent the appliance becoming too hot, there is a 10s delay when turning on the heater and a 10s delay when turning off the heater fan.

WIFI

Press to turn on/off Wi-Fi. An illuminated LED on the button indicates that the Wi-Fi is turned on. Hold button for 3 seconds to enter device pairing mode.

6B. REMOTE CONTROLS

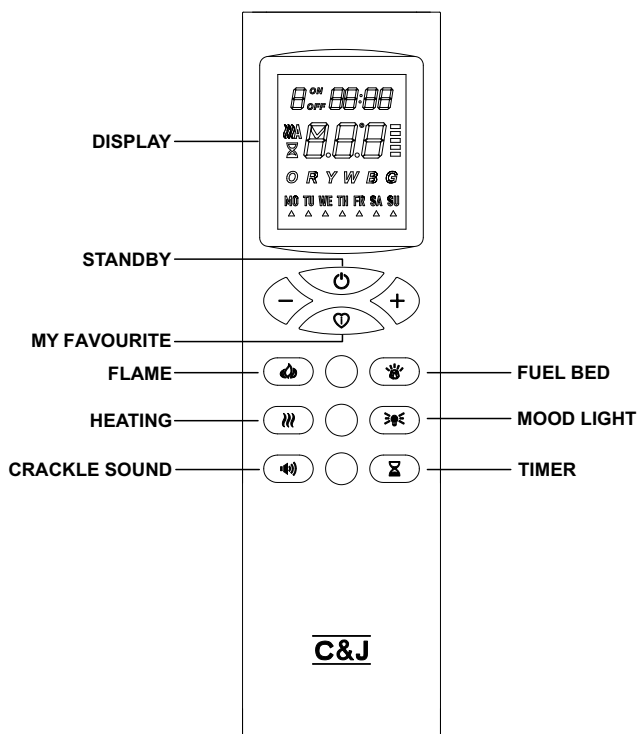

My Favourite

Press to turn on/off my favourite setting.

Simply choose the Flame/Fuel Bed/Ambient Light colour and brightness level, Crackling sound and volume level, Once you have selected your desired combination, press and hold the Preset Mode button for 3 seconds to save the setting.

Flame Effect

Repeatedly press to cycle through 3 flame effects and off setting.

Press the '—' and '+' button to select 5 levels of brightness.

Fuel Bed

Repeatedly press to cycle through 9 fuel bed effects and off setting.

Press the '—' and '+' button to select the 5 levels of brightness.

Mood Light

Note: If mood lights are not connected, please ensure the brightness is set to zero.

Repeatedly press to cycle through 14 different mood light colours and off setting.

Press the '—' and '+' button to select 5 levels of brightness.

Sound Effect

Press to turn on/off sound effect.

Press '—' and '+' button to adjust 5 levels of volume.

Heater Mode

Press to cycle through heat output options LOW-HIGH-OFF

Press the '—' and '+' button to adjust the temperature you want the room to reach from 16°C to 28°C, and then 58°C (continuous heating)

To switch between °C/°F, hold the heater buttons for 3 seconds.

NOTE: It is normal for the fan heater to stop running for periods of time. This happens because the room temperature is at or above the temperature set on the remote control.

Timer Mode

Press to cycle through the settings from 0.5 hours to 9 hours, and then OFF.

Adaptive Start Control

Learning from the previous heating cycle enables the appliance to judge the appropriate advance time to turn on the heater to ensure that the set temperature is reached at the set time. For example, if your timer is set to start at 18:00 and temperature is set to 23°C, the fire may for example come on at 17:30 to ensure the room is 23°C at 18:00.

Window Open Detection

When the transmitter detects a rapid drop in room temperature, it will be judged as a window open, the warning icon will be displayed and the heater will be turned off automatically.

After the indoor temperature has risen or a manual override of the warning (by operating remote control) has been done, the fire will return to normal working state.

Important Safety Information for Remote Controls

To remove the batteries, open the back cover of the remote control to remove the batteries and replace with new one. Pay attention to the positive and negative poles.

Two AAA alkaline batteries are required for the remote control.

Exhausted batteries are to be removed from the appliance and safely disposed of.

This Non-rechargeable batteries are not to be recharged.

Different types of batteries or new and used batteries are not to be mixed.

Batteries are to be inserted with the correct polarity.

If the appliance is to be stored unused for a long period, the batteries should be removed.

The supply terminals are not to be short-circuited.

Resetting the Thermal Cut Out

The appliance is fitted with an Electronic Safety Control (E.S.). This is a safety device, which switches off the fire if, for any reason, the appliance overheats, e.g. when covered. If the heater stops operating while the flame effect continues working normally, this indicates that the E.S. Control is in operation. The E.S. Control can only be re-set after the appliance has cooled down, and the appliance has been reset. Re-setting of the E.S. Control proceeds as follows:

1. Switch off the appliance (Manual switch) and leave it off for approximately 10-15 minutes.
2. Remove any obstruction to the fan heater outlet or fan blades etc. Make sure that the power supply is disconnected with the plug socket outlet while doing this.
3. Switch on the appliance and the E.S. Control will be re-set.
4. Ensure that the appliance is functioning correctly. If the E.S. Control operates again, the appliance should be checked by a competent electrician.

6C. APP Control

Visit your APP store for IOS or Android to download the C&JsmartFIRE APP. Or use the QR code on the next page. Follow your devices onscreen instructions to create an account. Once installed, follow the procedure below to pair the device with your appliance.

1. Start the APP and click “Add Device” on screen. Click “smartFIRE” ,then select WiFi network and enter the password. Note, your device must also be connected to the same home network what you wish to connect the appliance to.

2. Ensure the appliance is powered on and open the bluetooth on the phone , then press and hold the Wi-Fi button on the appliance until you hear 3 beeps at Bluetooth mode . At the same time, the Wi-Fi indicator and the fuel bed will blink.

3. Follow the instructions on APP to choose the Bluetooth mode and confirm the indicator is flashing . Click Next and start to add the device.

If failed at Bluetooth mode, try Wi-Fi mode. Please press the Wi-Fi button, you will hear 3 beeps, then keep pressing until you hear another 5 beeps to enter Wi-Fi mode. and then Follow the instructions on APP to choose the Wi-Fi mode and confirm the indicator is flashing . Click “Go to Connect” and choose a Wi-Fi called “SmartLife-XXX” and start to add the device.

7. MAINTENANCE

WARNING:


Before any maintenance or cleaning of the exterior of the appliance, the unit should be disconnected from the power supply remove supply plug from power socket or turn off and remove fuse from fused spur, wait until the appliance is cool.

Cleaning the Fireplace

Cleaning or polishing products are not recommended. Fingerprints or other marks on the front glass panel can be removed by a piece of soft, damp, lint-free cloth with a good quality household glass cleaner. The front glass panel should always be completely dried with a clean, lint-free cloth or paper towel.

Caution: Abrasive cleaners should not be used on the glass panel. Liquids should not be sprayed directly onto any surface of the unit.

8. SERVICE PARTS LIST

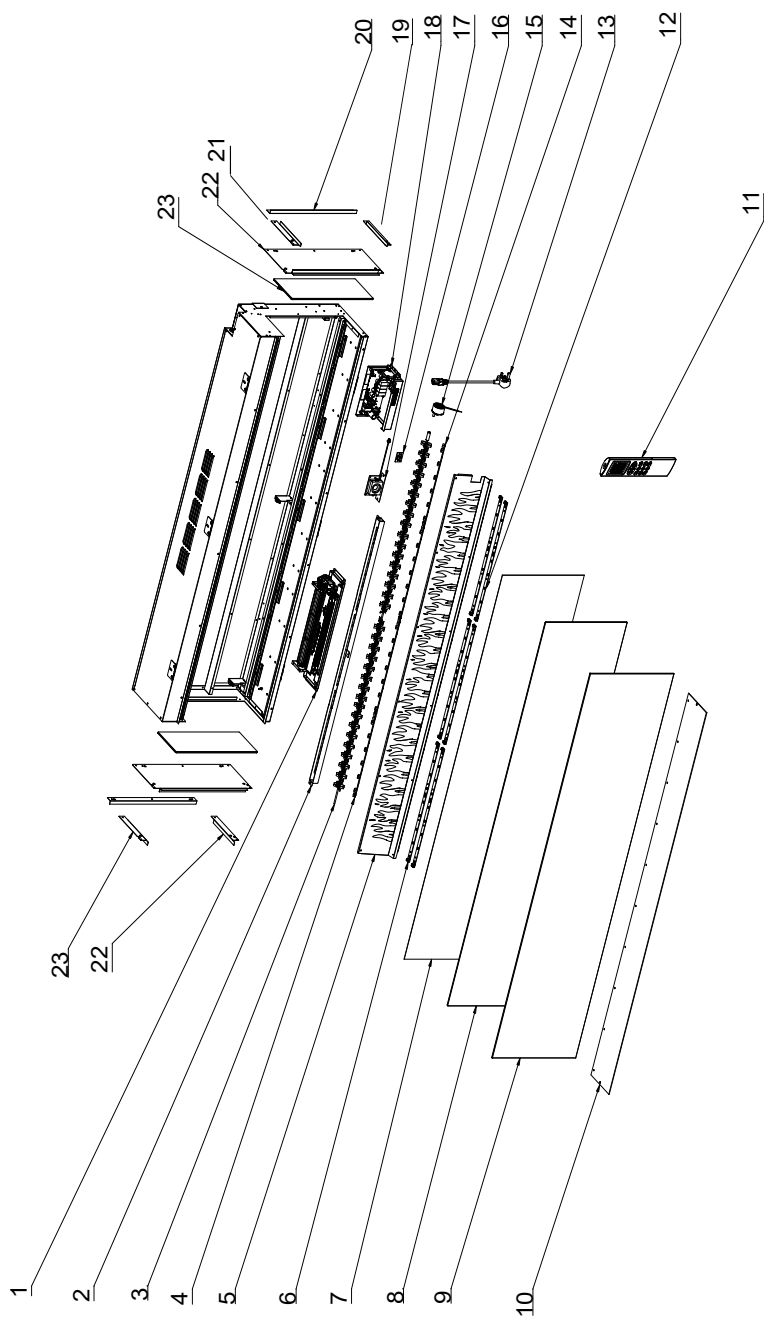

No.	Item	Go Eco MW100			Go Eco MW150			Go Eco MW180		
		Part No.	LED Model	QTY	Part No.	LED Model	QTY	Part No.	LED Model	QTY
1	Heater Unit	10152		1	10152		1	10152		1
2	Down Light	10153		1	9484		1	10199		1
3	Flame Effect Spindle	10154		1	10155		1	10164		1
4	Flame Effect LED Strip	10167	RC07-316F	2	10169	RC07-315E	2	10167	RC07-316F	4
5	Flame Effect Screen	10170		1	10171		1	10172		1
6	Fuel Bed Effect LED Strip	10173	RC07-125B	4	10173	RC07-125B	6	10173	RC07-125B	4
7	Rear Screen	10174		1	10175		1	10176		1
8	Middle Screen	10177		1	10178		1	10179		1
9	Front Glass	10180		1	9172		1	10181		1
10	Fuel Bed Shelf	10182		1	10183		1	10184		1
11	Remote Control	10185		1	10185		1	10185		1
12	Fuel Bed Effect LED Strip	-	-	-	-	-		10201	RC07-137B	4
13	Power Cord UK	8480		1	8480		1	8480		1
	Power Cord EU	10186		1	10186		1	10186		1
14	Flame Effect LED Strip	-	-	-	10187	RC07-319D	2	-	-	-
15	Spindle Motor	10188		1	10188		1	10188		1
16	Receiver Board	10189		1	10189		1	10189		1
17	Speaker	8888		1	8888		1	8888		1
18	Control Box	10190		1	10190		1	10190		1
19	Edging Strip(bottom)	10191		2	10191		2	10191		2
20	Edging Strip (backing)	10192		2	10192		2	10192		2
21	Edging Strip(top)	10193		2	10193		2	10193		2
22	Metal Side Plate	10194		2	10194		2	10194		2
23	Side Glass	10195		2	10195		2	10195		2
	Log Set	8643		1	8659		1	8671		1
	Black Chips	10196		1	10197		1	10198		1

9. OTHERS

Environment



Meaning of crossed –out wheeled dustbin:

Electrical appliances should not be disposed as unsorted municipal waste. Separate collection facilities should be used in the disposal of electrical appliances. Contact your local government for the information about the available collection systems. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When old appliances are replaced by the new ones, it is a legal oblige for the retailer to take back the old appliance for disposals at least free of charge.



This fire complies with the Safety Standards EN 60335-1 and EN 60335-2-30 which covers the essential requirements of the Low Voltage Directive 2014/35/EU and the EMC standards EN 55014-1; EN 55014-2; EN 61000-3-2 and EN 61000-3-3 which covers the essential requirements of the European Electro Magnetic Compatibility 2014/30/EU, and the RED standards EN300220-2, EN301489-1, EN301489-3 which covers the essential requirements of the European Radio Equipment Directive 2014/53/EU.



This fire complies with the Safety Standards BS EN 60335-1 and BS EN 60335-2-30 which covers the essential requirements of the Electrical Equipment (Safety) Regulations 2016 (S.I.2016/1101) and the EMC standards BS EN 55014-1; BS EN 55014-2; BS EN 61000-3-2 and BS EN 61000-3-3 which covers the essential requirements of the Electromagnetic Compatibility Regulations 2016 (S.I.2016/1091). and the RED standards BS EN 300220-2, BS EN 301489-1, BS EN 301489-3 which covers the essential requirements of the European Radio Equipment Regulations 2017.

Charlton & Jenrick Ltd

Unit D, Stafford Park 2, Telford, Shropshire, TF3 3AR

Tel: +44 1952 200 444 Fax : +44 1952 200 480

www.charltonandjenrick.co.uk