




## **Chamber Trim Kit Installation Guide**

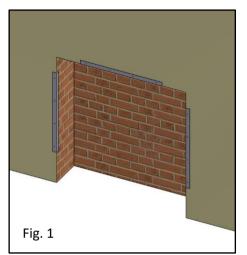

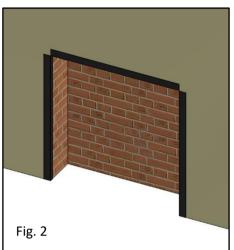

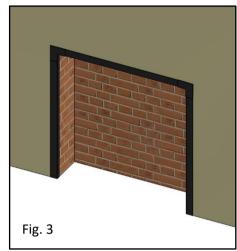

## Step 1.

Secure the 3 short angled sections around the chamber as shown in Fig. 1 These can be secured using appropriate screws/plugs (not supplied) through the holes on the angled sections or with suitable high temperature adhesive.

## Step 2.

Using the magnets provided, attach the 3 long angled sections to the short angled sections already secured to the wall as shown in Fig. 2. Depending on the chamber opening size, you may need to trim these outer angled sections. If necessary, carefully measure, mark and cut using an angle grinder and deburr any sharp edges. Note that the cut edges can be covered by the corner sections.

## Step 3.

Using the magnets provided, position the 2 corner sections over the long angled sections as shown in Fig. 3.